- New Forged brass manifold, increases working pressure to 4,000 PSI
- New plunger guide bushing (patent pending)
- Solid ceramic plungers with dual guide system
- New dual diameter plunger guide
- New optimized outlet valves
- New dual lip oil seal

SPECIFICATIONS



Pump Model	EP1505S34	EP1506S34	EP1508S34	EP1510S34	EP1306S34	EP1308S34	EP1310S34	EP1311S34	EP1313S34
Maximum Volume	2.1 GPM	2.9 GPM	3.4 GPM	4.2 GPM	2.1 GPM	2.6 GPM	3.2 GPM	3.4 GPM	4.0 GPM
Maximum Discharge Pressure		3,04	5 PSI		4,000				
Horsepower	4.4 HP	6.0 HP	7.1 HP	8.7 HP	5.7 HP	7.1 HP	8.6 HP	9.3 HP	10.7 HP
Maximum Pump Speed	3400 RPM								
Maximum Inlet Pressure	125 PSI								
Max. Inlet Vacuum	Flooded								
Plunger Bore	.591 in/15 mm				.512 in./13 mm				
Plunger Stroke	.197 in./5 mm	.236 in./6 mm	.315 in./8 mm	.394 in./10 mm	.236 in./6 mm	.394 in./10 mm	.394 in./10 mm	.433 in./11 mm	.512 in./13 mm
Oil Capacity	15 oz.								
Maximum Fluid Temperature	165° F								
Inlet Port Thread	1/2"-14 BSP-F								
Discharge Port Thread	3/8"-19 BSP-F								
Shaft Diameter	.945 in./24 mm								
Weight	15.4 lbs.								

Dimensions - Nominal





9.5"x8.38"x5.1"

Instructions and Recommendations for the Installation of

EP Series Pumps

Maximum temperature of the water through the pump is 165°F (73°C).


In order to obtain maximum performance in terms of duration of seals and valves, it is necessary to respect a few simple rules, as follows:

1) In order to avoid damage caused by cavitation, the pump must be pressure fed.

The higher the inlet pressure, the longer the life of the wet end of the pump.

When working at 165°F (73°C), the minimum feed pressure - measured directly in the inlet port of the pump when it is working - is 45 psi (3 bar).

The minimum feed pressure according to the different temperatures are:

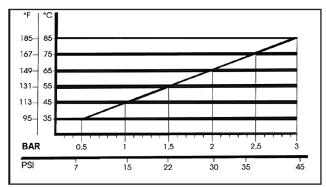

Naturally, if the application allows for feeding the pump with 45 psi (3 bar) even at low temperatures (for example: 115°F/45°C the life of the wet end of the pump will be even longer.

- 2) The plumbing which feeds the pump must be of a diameter at least equal to the inlet port. Also, follow the suggestions below:
 - a) Make the plumbing as short and straight as possible, preferably in an upward direction to facilitate the expulsion of eventual air bubbles naturally if compatible with the requirements of the system.
 - b) It is always useful to put a filter at the inlet with capacity of 4 to 5 times the flow of

the pump, for example for a 4 gpm (15 l/min) pump, put a filter from 16 to 20 gpm (60-75 l/mi)The mesh size suitable for this application is 0.016" (.4 mm).

c) It is extremely important to put a pressure switch on the suction port of the pump, and in any case downstream from the filter, so that it can stop the pump should the feed pressure drop by 20% due to the filter clogging or failure of the feed pump, etc.

3) Change of oil

We recommend the *first oil change after the first 50 hours*, with the *pump stopped* and the *oil still warm*.

This change is not recommended because the oil has lost its properties, but rather to eliminate the impurities that have gotten into the oil during the running-in phase. If these impurities are not removed, but are allowed to remain in the oil, they may cause premature wear to the moving parts and the oil seals. After this initial change, the oil can then be changed every three months or 300 hours of operation thereafter.

Please note: If the pump works in conditions with high humidity and with sharp temperature changes, it is possible that condensation will appear inside the crankcase, which mixing with the oil can change its properties. This is easy to see because the oil changes to a white, milky color.


If the pump does not have excessive water leaking from the packings, and the oil becomes milky, the oil has to be changed more frequently. The percentage of water in the oil must not exceed 20%.

Use oil per the following chart:

CHART OF COMPATIBLE OILS SAE15W40							
General Pump	Series 100						
BP	VISCO 2000						
CASTROL	CWX						
MOBIL	SUPER						
SHELL	HELIX SUPER						
TOTAL	QUARTZ 4000-5000						

Ref 300920 Rev.C 03-15

EP SeriesSolid Shaft - 3400 RPM

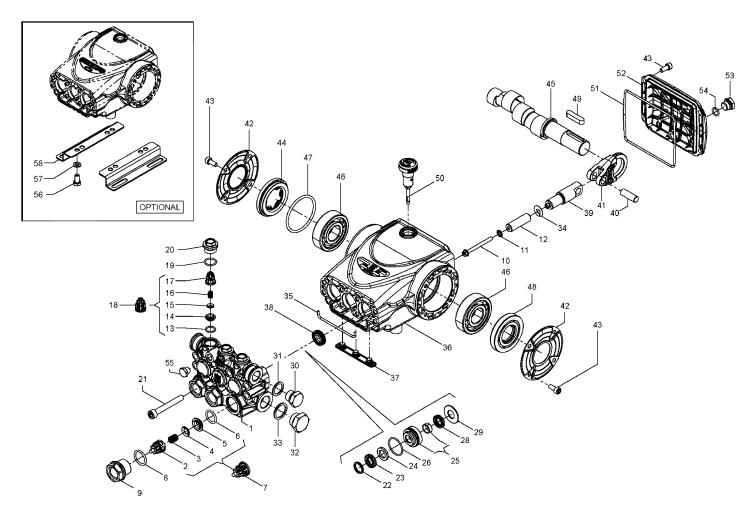

	RTS LIS	•									
ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QT
1.	58120041	Manifold, Ø 13	1	23.	90260200	Packing, Ø 13, HP	3	45.	63020265	Crankshaft, 5mm	1
	58120141	Manifold, Ø 15	1		90261100	Packing, Ø 15, HP	3			(EP1505S34)	
2.	36202551	Valve Cage	3	24.	90507650	Anti-ext. Ring, Ø 13	3		63020565	Crankshaft, 6.5 mm	1
3.	94737600	Spring, Ø 9.4x14.8	3		90508990	Anti-ext. Ring, Ø 15	3			(EP1306S34, EP1506S34))
4.	36711501	Valve	3	25.	58605601	Intermed. Ring, Ø 13	3		63020865	Crankshaft, 8mm	
5.	36200366	Valve Seat	3		58605701	Intermed. Ring, Ø 15	3			(EP1308S34, EP1508S34))
6.	701115	O-ring, Ø17.13v2.62	3	26.	701023	O-ring, 26.7x1.78	3		63021265	Crankshaft, 10mm	1
7.	36711501	Valve Assembly	3	28.	90260100	Seal, Ø 13, LP	3			(EP1510S34, EP1310S34))
8.	701002	O-ring, Ø20.24x2.62	3		90260800	Seal, Ø 15, LP	3		63021865	Crankshaft,	1
9.	98222600	Valve Cap, M24x1.5x16.7	3	29.	58210670	Support Ring, Ø 13	3			(EP1313S34)	
10.	99169000	Plunger Bolt, M5x55	3		58210770	Support Ring, Ø 15	3		63029165	Crankshaft	1
11.	96690500	Washer, Ø 5x11.5x0.4	3	30.	98210000	Plug, 3/8"x13	1			(EP1311S34)	
12.	58040009	Plunger, Ø 13x42	3	31.	96738000	Gasket, 17.5x23x1.5	1	46.	91833100	Bearing, Premium	2
	58040109	Plunger, Ø 15x42	3	32.	98217600	Plug, 1/2" BSPx10	1	47.	90409700	O-ring, Ø 55.56x3.53	1
13.	701014	O-ring, Ø 12.42x1.78	3	33.	96751400	Gasket, Ø 21.5x27x1.5	1	48.	90164100	Oil Seal, Ø 25x62x10	1
14.	36211366	Outlet Valve Seat	3	34.	96698000	Washer, Ø 7.5x15x0.5	3	49.	91489200	Key	1
15.	36211276	Outlet Valve Poppet	3	35.	58210582	Gasket, Ø 3x94	1	50.	98210500	Oil Dipstick	1
16.	94733300	Spring, Ø 6.2x10.4	3	36.	58010022	Crankcase	1	51.	90392550	O-ring, Ø 113.97x2.62	1
17.	36211151	Outlet Valve Cage Guide	3	37.	58210451	Drip Cover	1	52.	58160022	Rear Cover	1
18.	36719301	Complete Outlet Valve	3	38.	90156550	Oil Seal, Ø 15x24x5.7	3	53.	98204100	Plug, 1/4"x9	1
19.	701016	O-ring, Ø 15.6x1.78	3	39.	58050066	Piston Guide	3	54.	701013	O-ring, Ø 10.82x1.78	1
20.	98213700	Outlet Valve Cap, M18x1.5x10	3	40.	97734000	Piston Pin, Ø 10x29.5	3	55.	98196600	Plug, 1/8"x8	1
21.	99317500	Screw, M8x60	8	41.	58030022	Connecting Rod	3	56.	99303700	Screw, Hex Head	4
22.	44100251	Head Ring, Ø 13	3	42.	58150074	Crankcase Side Cover	2	57.	96701600	Washer, Ø 8.4	4
	63101051	Head Ring, Ø 15	3	43.	99183700	Screw, M6x14	12	58.	50200074	Pump Foot	2
		<u> </u>		44.	44211801	Sight Glass	1			•	

REPAIR KITS TORQUE SPECS*


KIT NO.	K269	K270	K271	Ø	13	Ø 15		
	1.200			K272	K275	K273	K276	
ITEM NO'S INCLUDED IN KIT	2, 3, 4, 5, 6, 13, 14, 15, 16, 17, (7), (18)	8, 9, 19, 20	38	22, 23, 24, 26, 28	22, 23, 24, 25, 26, 28 29	22, 23, 24, 26, 28	22, 23, 24, 25, 26, 28 29	
NUMBER OF ASSY'S IN KIT	6	6	3	3	1	3	1	
NO. OF CYLINDERS KIT SERVICES	3	3	3	3	1	3	1	

Position	FtLbs.	Nm.
9	96	130
10	4.5	6
20	44.3	60
21	14.8	20
30	30	40
32	30	40
43	7.4	10
53	14.8	20
55	9.6	13
56	14.8	20

^{*}Decrease torque by 20% if threads are lubricated.

**Use Loctite 542 Red

DIMENSIONS

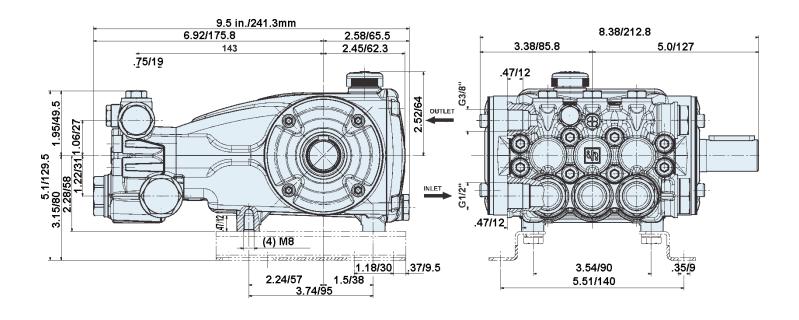

Ref 300920 Rev.C 03-15

